


TWIN/FULL STATITE WIRE ASSEMBLY INSTRUCTIONS

Figure 1

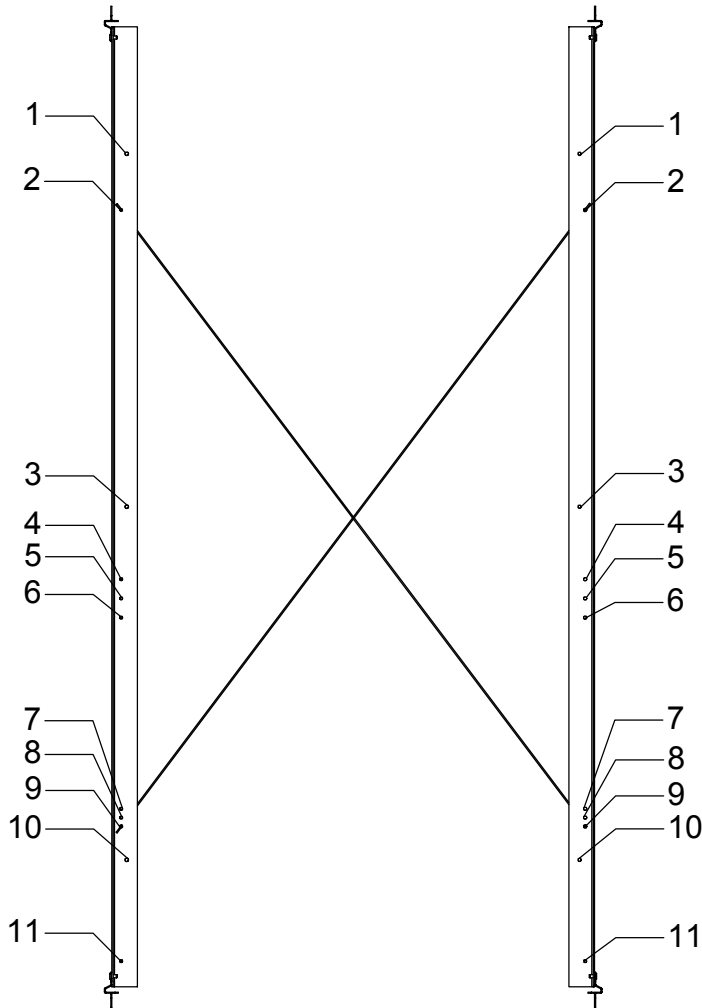

WIDTH	USE HOLES
37 1/2"	2 and 9
38 3/8"	2 and 8
39 1/4"	2 and 7
52 1/2"	2 and 6
53 3/8"	2 and 5
54 1/4"	2 and 4

Step 1: Separate rails and lay them out as shown in Figure 1.

Step 2: Measure distance between slots/holes in headboard.

Step 3: Using diagram in Figure 1, select the next smaller set of holes and install cross wires as shown. (Example: If distance between slots/holes is 38" use holes 2 and 9 for 37 1/2".)

Note: Insert cross wires from under side of rail as shown in Figure 2.

Step 4: After placing cross wires in proper holes, mount rails to headboard and footboard. When installing the last of the four corners, it will be necessary to exert some force. **Cross wires must be stretched tight to insure maximum support.**

Figure 2

