


# Installing: Bedbridge™ Rail Adapter for Wood Side Rails

BBA-15

**Kit Contains:** Two Rail Adapters, and Fasteners pack  
**Accommodates:** Full, Queen, Olympic Queen, King or Cal. King  
**Tools:** Screwdriver, tape measure, pencil

Pat. Pend.


Step ①

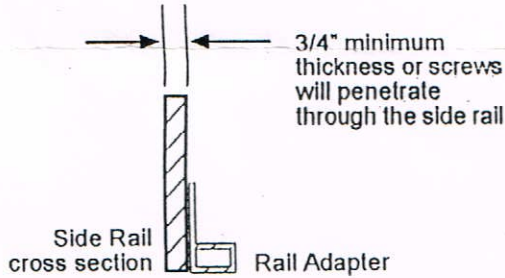

① The existing bed Side Rails must be wood a minimum of 3/4 of an inch thick. **Do not use this kit if the Side Rail is less than 3/4" thick.**

Steps

③ ④

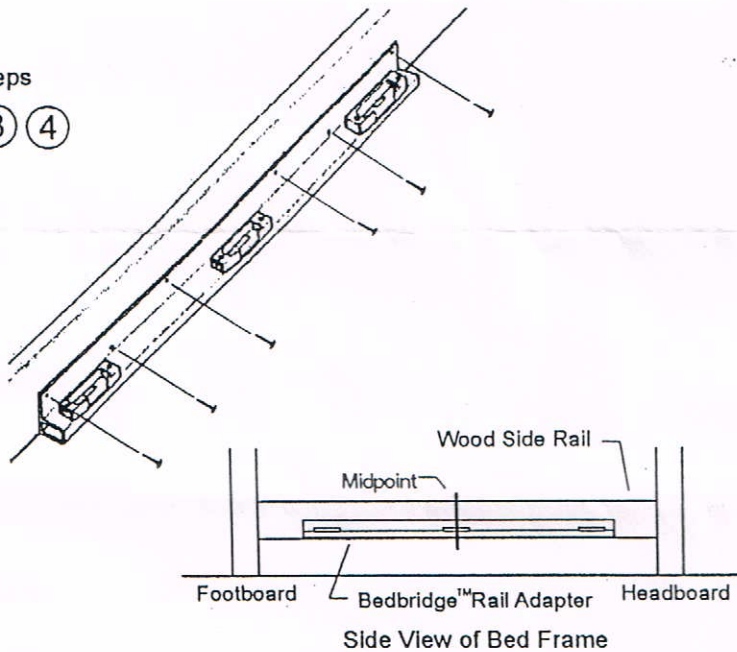


② Remove any existing hardware from the inside of the Side Rail and discard.

③ Center the Rail Adapter on the inside of the Wooden Side Rail between the Headboard and the Footboard. Align the bottom of the Rail Adapter with the bottom of the Wooden Side Rail.

④ Using the hardware provided, attach the Rail Adapter to the Side Rails.

Steps ⑤

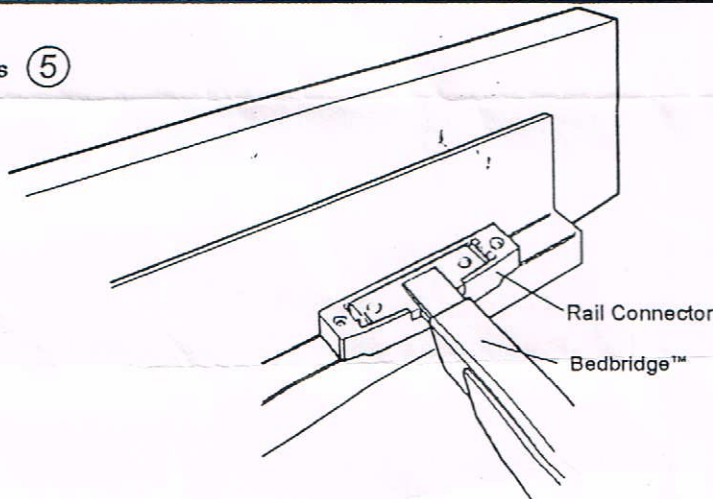

⑤ Bedbridge™ will lock into the Rail Connector receptacle on the Rail Adapters. Follow the assembly instructions included with your Bedbridge™ kit.