
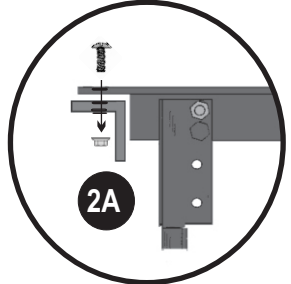
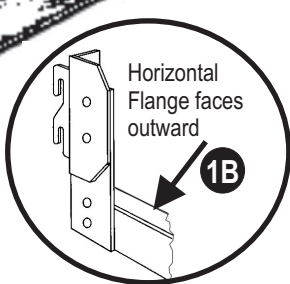


Instructions for assembly of DRCV1L converter rail

Important: Rails must be installed so that the flat edges of the rails are to the top and inside of your bed. In other words, the open "L" of the rails should be to the outside of your bed.

Glideaway's new model DRCV1L CONVERTER RAIL converts full size bed to accommodate queen size bedding. Extra legs provide the rigid center support necessary to protect queen size bedding. Special hooks drop bedding 3 1/2 inches.

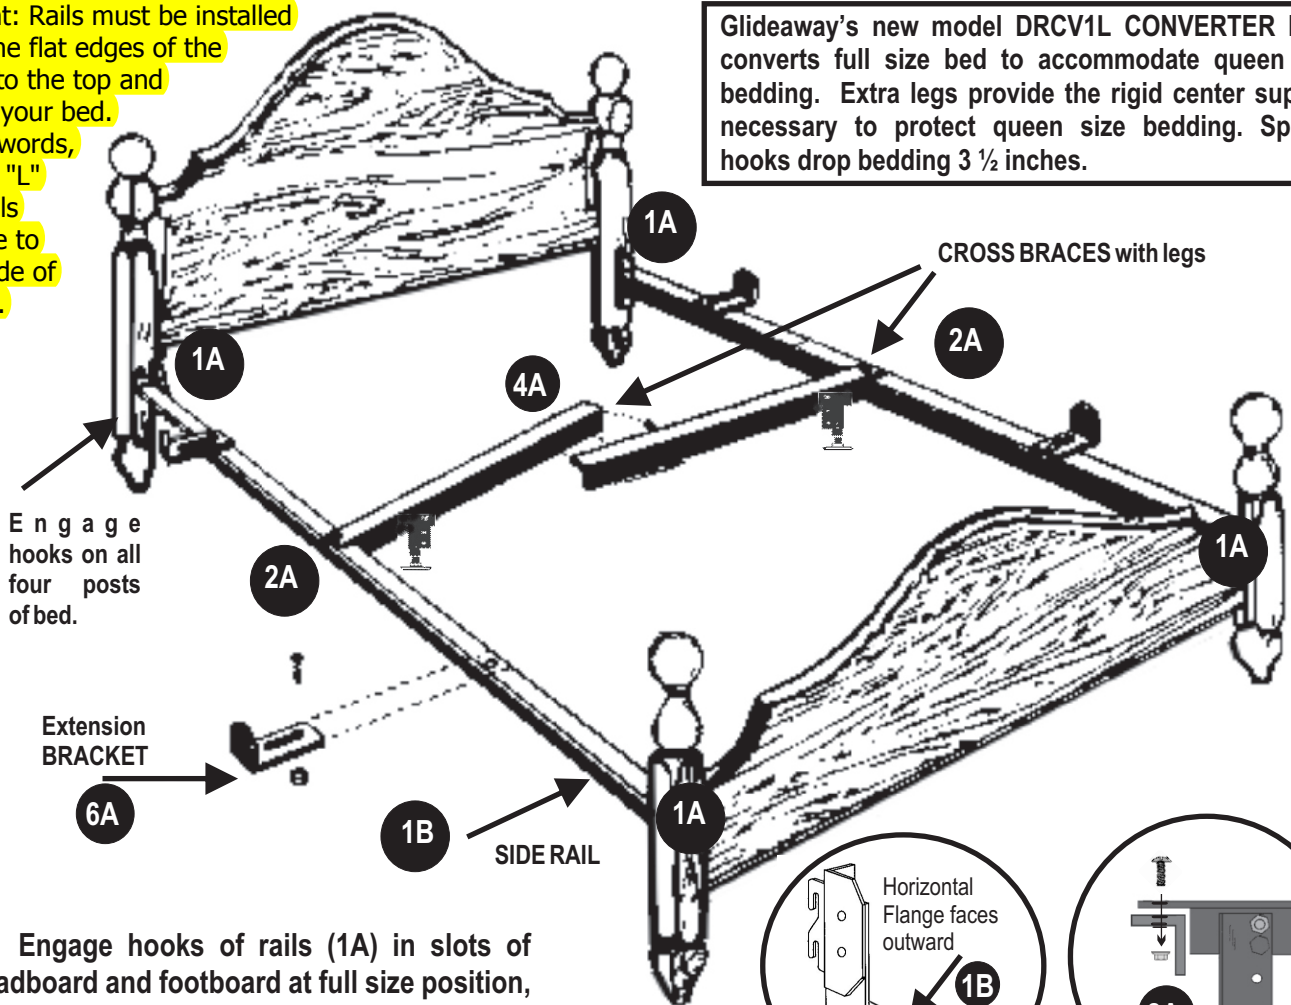

- Engage hooks of rails (1A) in slots of headboard and footboard at full size position, with horizontal flange(1B) of rail protruding outward, as shown. Tap all hooks securely into slots of bed end.
- Attach cross braces to side rails with nut and bolts (2A). Do not fully tighten at this point.
- Swing the two cross braces together where they overlap in the center of the bed.
- Slide clamp over the two cross braces (Figure 4A). FINGER TIGHTEN ONLY-DO NOT USE PLIERS.
- Insert threaded glide into leg (Figure 5A).
- To attach four brackets, insert bolt thru slot in bracket and hole in rail (Figure 6A). Place lock washer on bolt and fasten with nut.
- If adjustable glides do not touch floor, it may be necessary to attach extensions legs (Figure 7A)
- Place box spring on rails (center). Push brackets against box springs. Tighten nuts with fingers or pliers.

